

SR552

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	

Lock-In Preamplifier


SR552 — BJT input preamplifier




- 1.4 nV/√Hz input noise
- BJT input, 100 kΩ input impedance
- Gain of 10, 20, 50 or 100
- Single-ended and differential inputs
- AC coupled input
- Powered by SRS lock-in amplifiers

The SR552 Voltage Preamplifier is designed to work with SRS lock-in amplifiers, providing gain where it is needed most—right at the experiment. The preamplifier minimizes noise and pickup in the connecting lines and can reduce measurement time in noise-limited experiments. The SR552 has a bipolar front-end design (100 kΩ impedance, 1.4 nV/√Hz noise). Power and control signals are brought from the lock-in by a 9-pin cable (included). The SR552 may also be operated independently by applying appropriate power supply voltages (± 20 VDC, +5 VDC).

SR552 Specifications

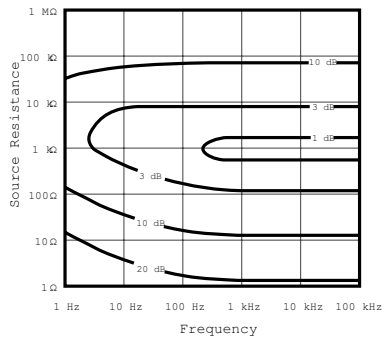

SR552 noise contour

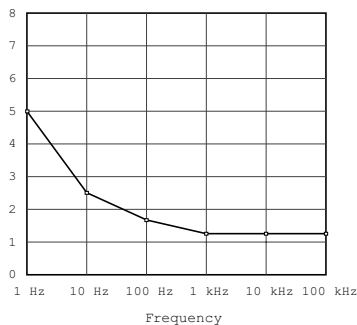

SR552 noise plot

Input impedance	100 kΩ + 25 pF
Inputs	Single-ended or differential
Maximum input	70 mVrms for overload 50 VDC, 20 VAC damage threshold
Noise (typ.)	1.4 nV/√Hz at 1 kHz 1.6 nV/√Hz at 100 Hz 2.5 nV/√Hz at 10 Hz
Coupling	AC (0.016 Hz)
CMRR (1 V input)	100 dB at 100 Hz
Gain	10, 20, 50, 100 (Automatically set by SR510 or SR530 lock-in)
Full-scale input	10 nV to 200 mV
Gain accuracy	2% (2 Hz to 100 kHz)
Gain stability	200 ppm/°C
Outputs	A (signal, 600 Ω, single-ended) B (shielded ground)
Maximum output	10 Vpp
Power	Supplied by SR510, SR530, SR810, SR830, SR850 or SR124 via control cable
Mechanical	3.0" × 1.3" × 5.1" (WHD)
Weight	1 lbs.
Warranty	One year parts and labor on defects in materials and workmanship

Ordering Information

SR552 Lock-in preamplifier

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	

rsy@nt-rt.ru || <https://srs.nt-rt.ru/>